



iPhone 6 Plus 5GHz Wi-Fi Antenna Replacement

Replace the 5GHz Wi-Fi antenna in your iPhone 6 Plus.

Written By: Walter Galan



INTRODUCTION

Use this guide to replace the 5GHz Wi-Fi antenna.



TOOLS:

- [Tweezers](#) (1)
- [iFixit Opening Tools](#) (1)
- [P2 Pentalobe Screwdriver iPhone](#) (1)
- [iSlack](#) (1)
- [Suction Handle](#) (1)
- [Phillips #000 Screwdriver](#) (1)




PARTS:

- [iPhone 6 Plus 5GHz Wi-Fi Antenna](#) (1)

Step 1 — Pentalobe Screws



 Before disassembling your iPhone, discharge the battery below 25%. A charged lithium-ion battery can catch fire and/or explode if accidentally punctured.

- Power off your iPhone before beginning disassembly.
- Remove the two 3.6 mm P2 Pentalobe screws next to the Lightning connector.

Step 2 — iSclack Opening Procedure



- i** The next two steps demonstrate using the [iSclack](#), a great tool for safely opening the iPhone 6 Plus that we recommend for anyone doing more than one repair. **If you aren't using the iSclack, skip to Step 4.**
- If the plastic depth gauge is attached at the center of the iSclack, remove it now—it's not needed for larger phones like the iPhone 6 Plus.
 - Close the handle on the iSclack, opening the suction cup jaws.
 - Place the bottom of your iPhone in between the suction cups.
 - i** Position the iSclack's upper suction cup against the display, near the home button.
 - Open the handles to close the jaws of the iSclack. Center the suction cups and press them firmly onto the top and bottom of the iPhone.

Step 3




- Hold onto your iPhone securely and close the handle of the iSclack to separate the suction cups, pulling the front panel up from the rear case.
- ⓘ The iSclack is designed to safely open your iPhone enough to separate the pieces, but not enough to damage any of the display cables.
- Peel the two suction cups off your iPhone.
- **Skip the next three steps and continue on to Step 7.**

Step 4 — Front Panel Assembly



- If you don't have an iSlack, use a single suction cup to lift the front panel:
- Press a suction cup onto the screen, just above the home button.
- ⓘ Be sure the cup is pressed securely onto the screen to get a tight seal.

Step 5

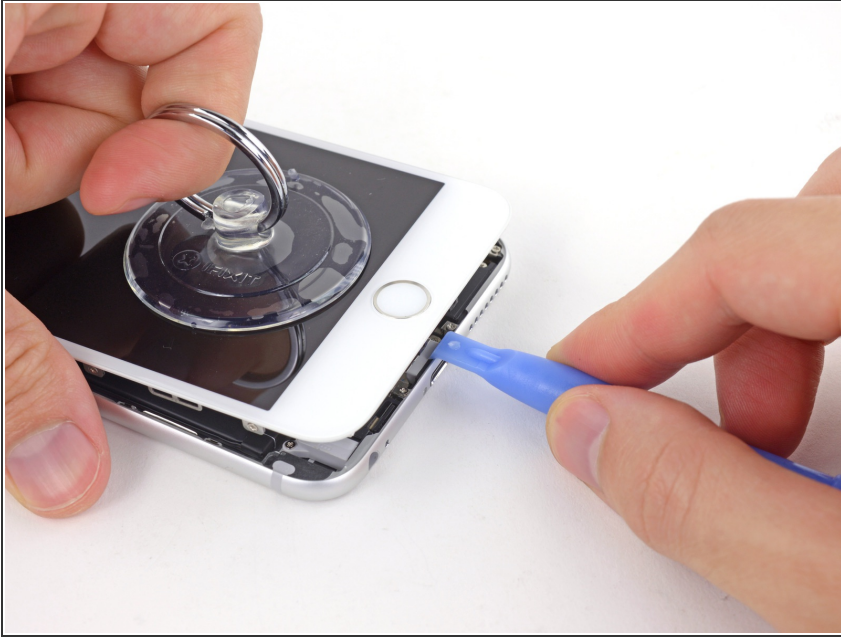

- While holding the iPhone down with one hand, pull up on the suction cup to slightly separate the front panel assembly from the rear case.
 - ⚠ Take your time and apply firm, constant force. The display assembly is a much tighter fit than most devices.
- Using a plastic opening tool, begin to gently pry the rear case down, away from the display assembly, while continuing to pull up with the suction cup.
- ⓘ There are several clips attaching the front panel assembly to the rear case, so you may need to use a combination of the suction cup and plastic opening tool to free the front panel assembly.

Step 6




- Pull the plastic nub to release the vacuum seal on the suction cup.
- Remove the suction cup from the display assembly.



Step 7



- Pull the home button end of the front panel assembly away from the rear case, using the top of the phone as a hinge.
 - Open the display to about a 90° angle, and lean it against something to keep it propped up while you're working on the phone.
 - Add a rubber band to keep the display securely in place while you work. This prevents undue strain on the display cables.
- ❗ In a pinch, you can use an unopened canned beverage to hold the display.

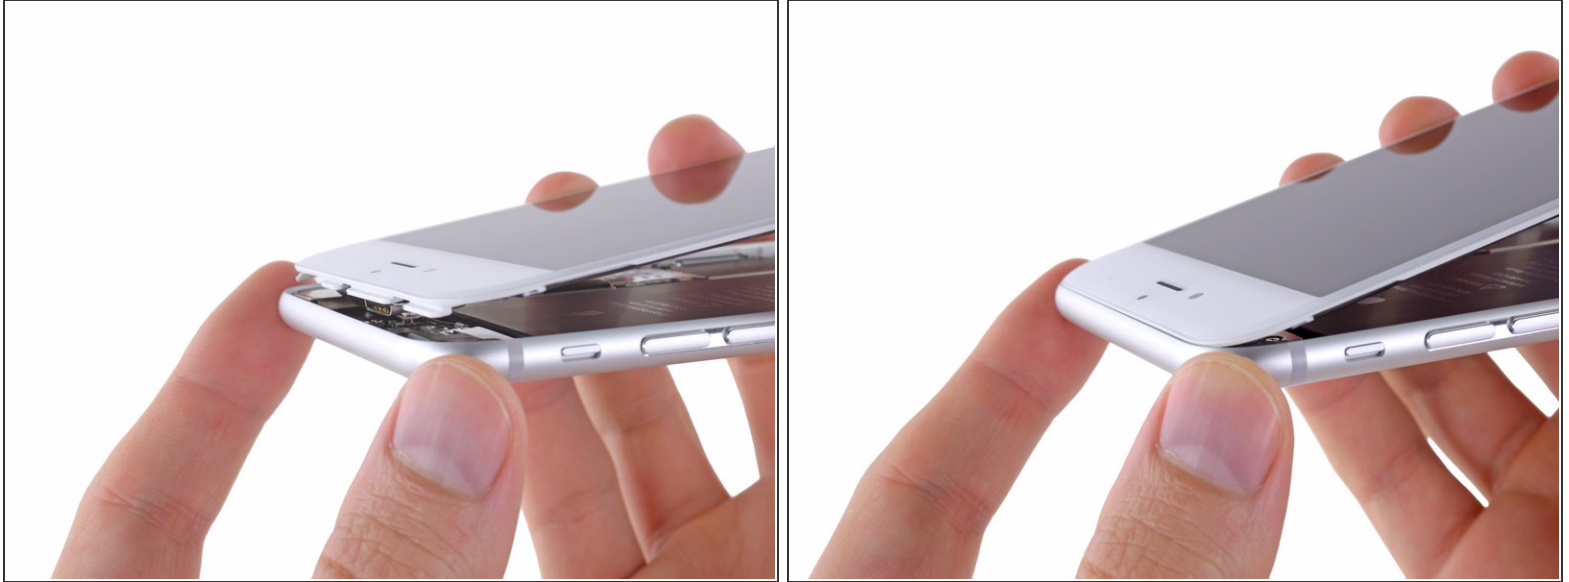Step 8



-  Several clips along the top edge of the front panel form a partial hinge, allowing the front panel assembly to swing open like a book.
-  During reassembly, align the clips just below the top edge of the rear case. Then, slide the front panel upward until its top edge is flush with that of the rear case.

Step 9



- Remove the following Phillips screws from the battery connector bracket:
 - One 2.3 mm screw
 - One 3.1 mm screw

Step 10



- Remove the metal battery connector bracket from the iPhone.

Step 11



- Gently pry the battery connector up from its socket on the logic board.
- ⚠ Take care to **only** pry up on the battery connector, and not the socket on the logic board. If you pry up on the logic board socket, you may break the connector entirely.

Step 12



- While holding the front panel open at about a 90° angle, remove the following Phillips screws securing the front panel assembly cable bracket:

- Three 1.2 mm screws
- One 1.5 mm screw
- One 2.9 mm screw

⚠ Do not attempt to insert longer screws into the red marked screw holes. Doing so may result in irreparable damage to the logic board.

Step 13



- Remove the front panel assembly cable bracket from the logic board.


Step 14



⚠ In the next four steps, take care to pry up **only** on the cable connectors, and not on their sockets on the logic board.


- While still supporting the front panel, use a plastic opening tool to disconnect the front-facing camera and earpiece speaker cable connector.

Step 15

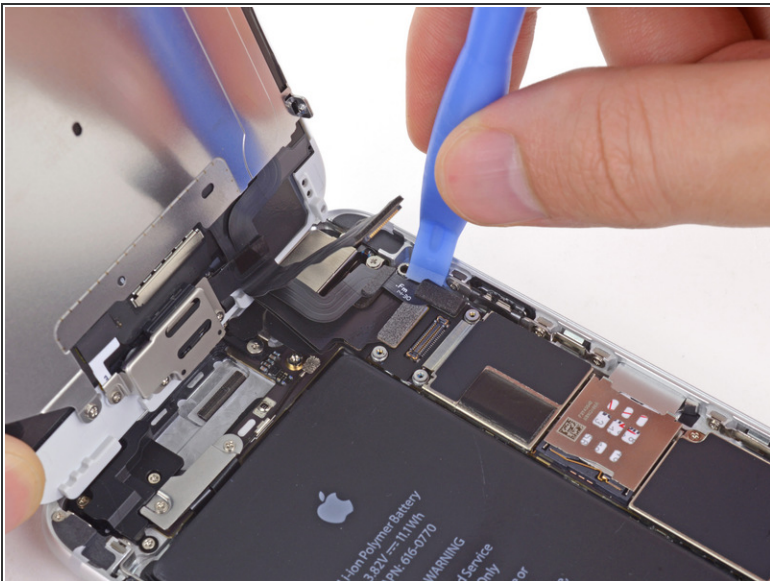



- Use a plastic opening tool to disconnect the home button cable connector.

Step 16

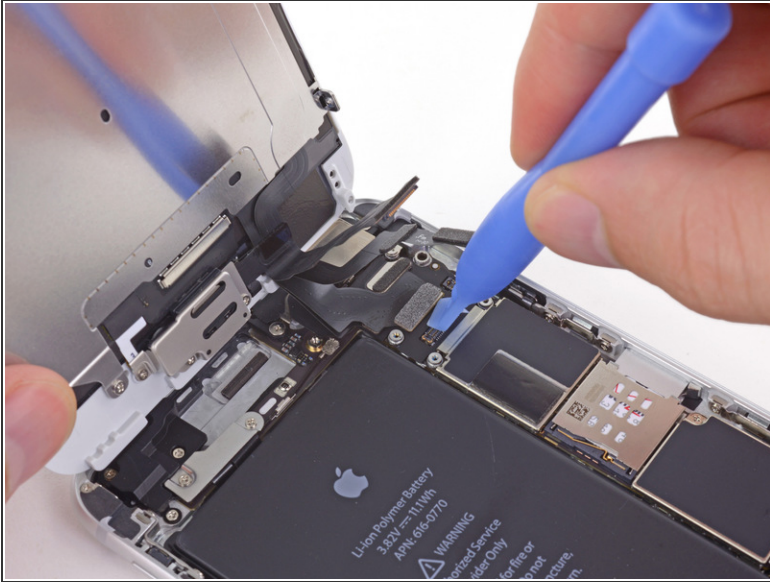


- Use a plastic opening tool to disconnect the display data cable connector.
- ★ When reassembling your phone, the display data cable may pop off the connector. This can result in white lines or a blank screen when powering your phone back on. If that happens, simply reconnect the cable and power cycle your phone. The best way to power cycle your phone is to [disconnect and reconnect the battery connector.](#)

Step 17

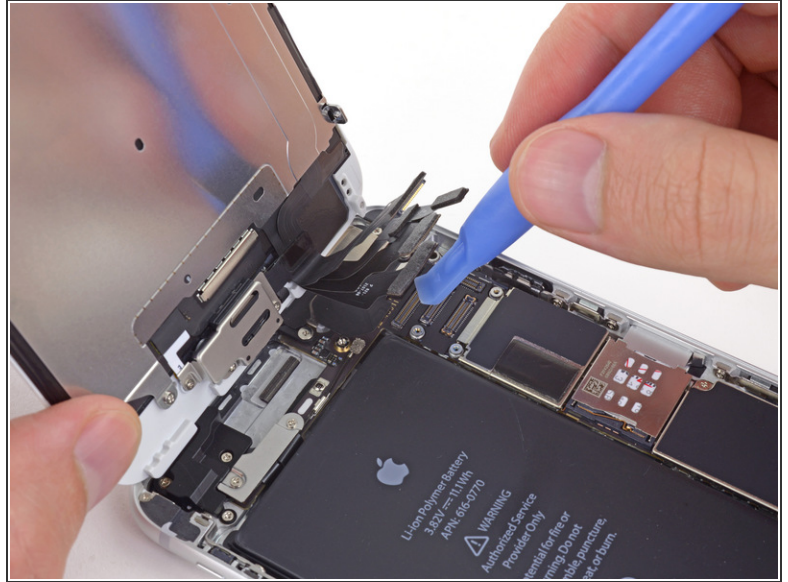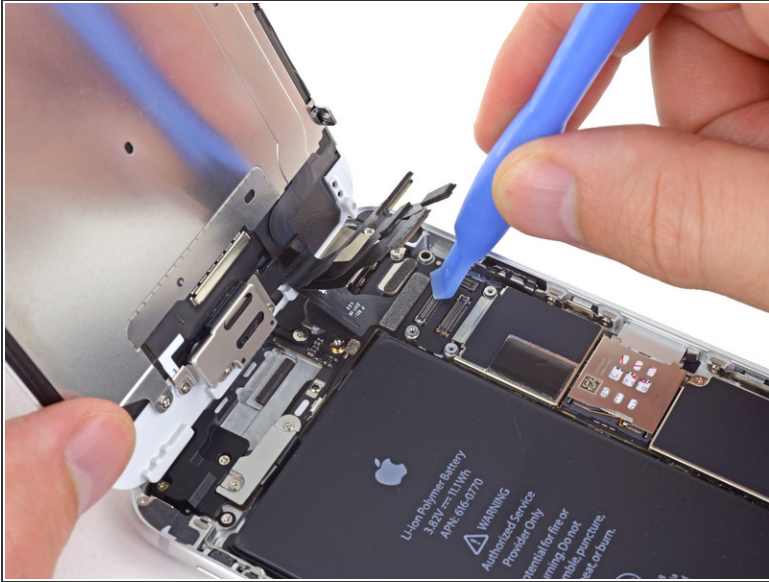

- Finally, use a plastic opening tool to disconnect the digitizer cable connector.
- ✦ When reconnecting the digitizer cable, **do not press the center of the connector**. Press one end of the connector, then press the opposite end. Pressing in the center of the connector can bend the component and cause digitizer damage.

Step 18

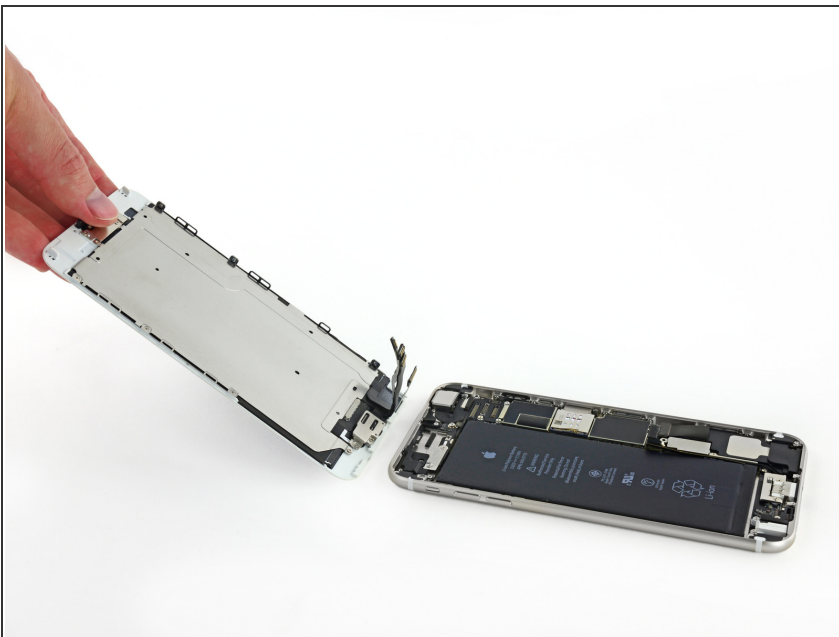

- Remove the front panel assembly from the rear case.

Step 19 — 5GHz Wi-Fi Antenna



- Remove the following screws securing the antenna bracket to the rear case:
 - One 1.5 mm Phillips #00 screw
 - One 2.8 mm Phillips #00 screw

Step 20



- Grasp the 5GHz Wi-Fi antenna bracket with a pair of tweezers and lift it off the iPhone.

Step 21



- Carefully pry the 5GHz Wi-Fi antenna connector up off the logic board with a plastic opening tool.

Step 22



- Grasp the 5GHz Wi-Fi antenna connector with a pair of tweezers and gently lift it from its retaining clip on the logic board.

Step 23




- i** The two connectors may be coupled by a single adhesive tab. If this is the case, then they may detach as a pair.
- Disconnect the power button cable and audio control cable connectors from their respective sockets on the logic board.

Step 24



- Remove the following screws securing the 5GHz Wi-Fi antenna to the rear case:
 - One 2.8 mm Phillips #00 screw
 - Two 1.6 mm Phillips #00 screws

Step 25

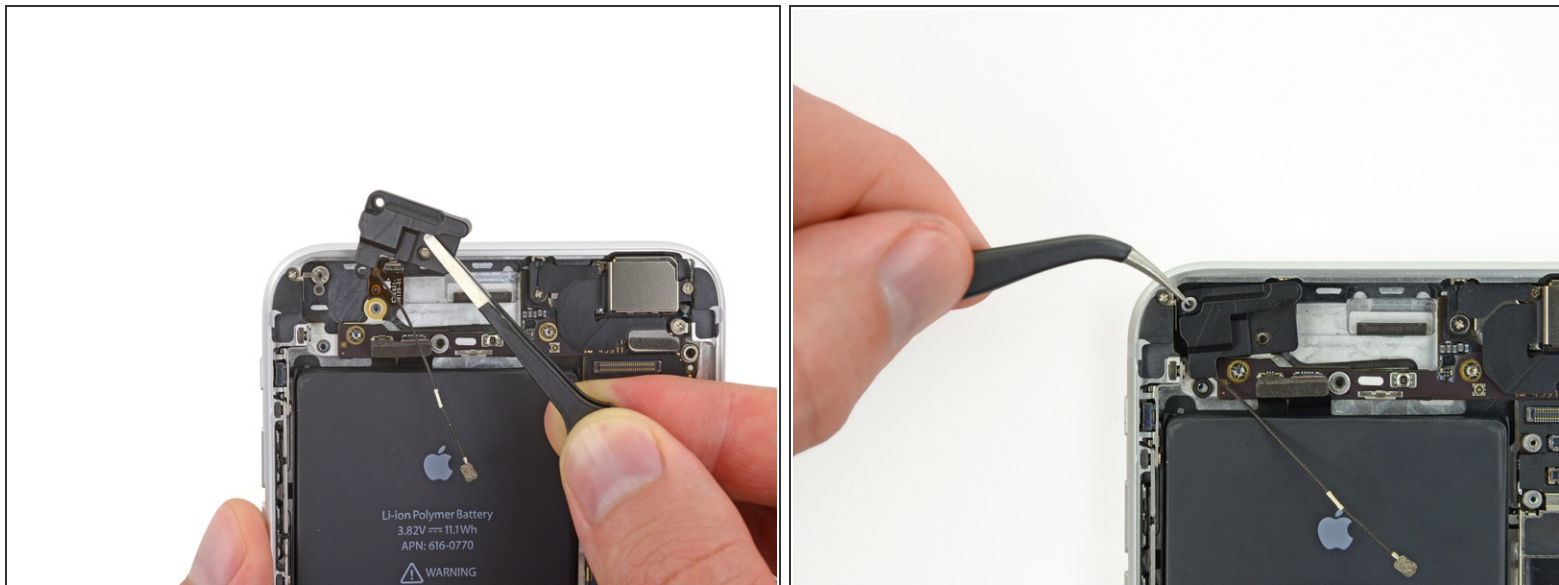

- Use a pair of tweezers to grasp and remove the 5GHz Wi-Fi antenna out of the iPhone.
- ✦ During reassembly, make sure to place the small washer in the top left corner of the 5GHz Wi-Fi antenna.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-11-22 07:25:34 PM.